

## Frequently Asked Questions

### Question

Remove the C6 rear light wing cluster unit

### Answer

You need to remove the rear wing lamp cluster?

### Remove the flap (2) .

Remove the nuts At " a " .

Disconnect the connector at " b " .

Remove the rear lamp (1) .

### To re fit:

Connect the connector at " b " .

Clip the rear lamp unit at " c " and " d " .

Then Fit :

\* The rear lamp (1)

\* The nuts At " a "

\* The flap (2)

---

### Details

Info 02 December 2009 by

---